

Precision Rifle Sling



Instructions for use:

The Armageddon Gear Precision Rifle Sling is a highly versatile tool that can be used as a patrol/assault sling, yet also provides support when firing from alternate positions. No other sling allows shooters to "Sling in" to a sling-supported position and un-sling from that position as quickly and easily as the Armageddon Gear Precision Rifle Sling.

Your Precision Rifle Sling features a length of webbing on each end that can be routed through or around the attachment points on your rifle. If your rifle is equipped with Quick-Detach (QD) sling swivel sockets, you may install those QD sockets through the looped ends of your Precision Rifle Sling to allow rapid attachment and removal of the sling from the rifle.

Installation Notes:

- A. The "Bungee" section of the Precision Rifle Sling attaches to the buttstock-end of the rifle.
- B. The adjustable end of the Precision Rifle Sling attaches to the forend area of the rifle.
- C. Install the Precision Rifle Sling so that the adjustment "Tail" and cuff-release slider loop are "inside" or facing the rifle. This may look "Inside-out" but is correct for easiest use of the adjustment features.

To install the sling:

1. Run the free end of the sling's tails through each QD swivel (if applicable) or sling mounting loops/points on your rifle.
2. Insert each free end of the sling back through the ladder-type buckle, following the weave of the installed webbing.
3. Fold the end of the sling back against itself and over the first bar of the ladder-type buckle then under the last bar. This is called "Double locking" the webbing tail and will help ensure the sling does not come loose. For combat use, it is recommended to further secure the tails of your sling (any sling, regardless of make) in position using 100mph tape around these webbing tails.
4. Repeat on opposite end.

Use and adjustment of the Precision Rifle Sling:

1. For patrol or assault carry, place the sling behind your neck and/or around your shoulder as desired. The bungee section of the Precision Rifle Sling reduces the need to make frequent adjustments. If adjustments are required, simply pull or release the adjustment end of the sling through the side-release buckle. This can be done with the support-side hand without taking your eyes away from the threat area.
2. To assume a sling-supported position, remove the sling from your neck/shoulder then simply insert your arm through the support loop and assume the firing position of your choice. The support loop will tighten against your arm automatically.
3. To adjust the tension of the sling during supported-fire, simply pull or release the adjustment end of the sling through the side-release buckle. This can be done with the support-side hand without breaking the support position, allowing you to keep your sights on target while making adjustments to your sling support.
4. To exit the support position, grab the release loop and pull away from your arm to loosen.

Adjustment note:

The Precision Rifle Sling features an adjustable ladder-type slider that can be set at your desired position to keep the support loop open during patrol/assault carry. This slider can also be used to limit how tightly the support loop will close around your arm under tension of the supported position, ensuring continued blood flow and comfort during long periods of supported fire. The use of this slider is optional and may be set according to your preference.